MORSERINO NOTES (N3GE) 04/14/2022

CW TRAINER

SETUP: USB INTERFACE COMPUTER TO MORSERINO MICRO USB CABLE




On Morserino: CW Keyer <RET>

On Computer: Within CHROME, EDGE, or OPERA Internet Browser:

Open WWW. https://tegmento.org/


AT: Morserino Status: CONNECT & select USB serial port

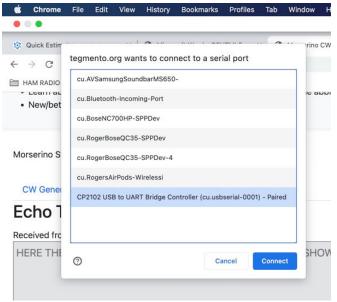

Place your copy (i.e. words/sentence/etc) within "Your input"

(Note that you can utilize cut & paste)

Send CW thru your Morserno & compare with your copy

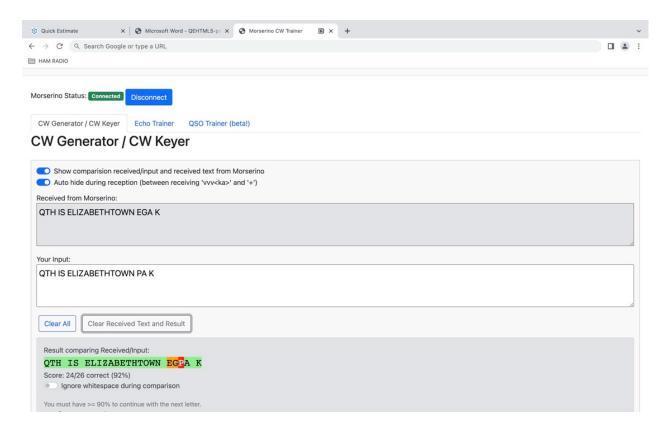

This program also works with ECHO TRAINER & QSO TRAINER